

Most recent information

The most recent versions of the software/firmware for this unit are as follows.

Windows

Driver: 1.04 (Previously 1.03. Updated at this time)
Firmware: 1.00 (No new update)

Mac OS X

Settings Panel: 1.00 (No new update)
Firmware: 1.00 (No new update)

We request that you always use the latest versions of the unit software/firmware. For information about the latest firmware/software, check the TEAC Global Site (<http://teac-global.com/>).

New functions

Windows Driver

■ Version 1.03

- Windows 10 is now supported.
The driver V1.03 can also be used with Windows 7 and Windows 8.

Maintenance items

Windows Driver

■ Version 1.04

- We had an issue with playback for users of software such as Band-in-a-Box, REAPER, which we have now rectified.


■ Version 1.01

- We had an issue with playback for users of software such as Google Chrome, Apple iTunes and foobar2000, which we have now rectified.

Checking the software/firmware versions

Before beginning to update the software/firmware, check the software/firmware version of the US-16x08 unit being used.

For details about how to check the software/firmware version, see “Opening the Settings Panel” in “6 – Using the Settings Panel” of the Reference Manual.

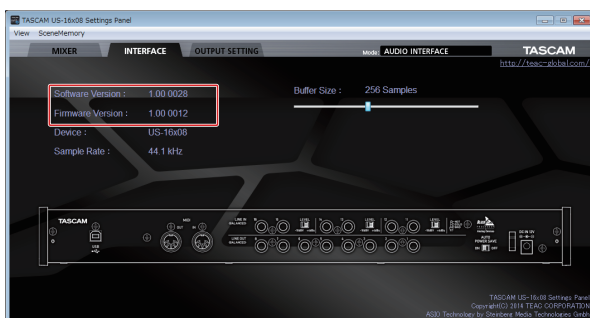

Windows Settings Panel screen

Procedures for updating the computer software

Preparing

- If the latest software has already been installed, there is no need to update it. Use it as is.
- Disconnect all cables connected to the unit.
- Set the phantom power switch to off.

Updating the Windows driver

- Download the latest driver for the operating system you are using from the TEAC Global Site (<http://teac-global.com/>) and save it on the computer to be used with the unit.
- Open the saved driver (zip file) on, for example, the computer desktop.
- After uncompression, double-click the “TASCAM_US-16x08_X.XX.exe” (“X.XX” is the number of version) file in the folder that appears after uncompression to automatically launch the installation software.
- After this, follow the installation procedures in “Installing the dedicated driver for Windows” in the Owner's Manual.