

TASCAM

US-122L / US-144 Firmware Release Notes

Version 1.11 – October 30, 2007

Updates

Always ensure that you are running the latest driver software and US-122L or US-144 firmware by visiting <http://www.tascam.com>

Installation Frequently Asked Questions

Which should I update first, the firmware or the driver?

It is best to update to the latest driver first, then update the firmware.

How do I update my unit's firmware?

Simply download the latest firmware updater application from TASCAM's web site, launch it, plug your US-122L or US-144 into your computer, wait for the unit to be detected by the updater application, and then press the "write firmware" button.

Maintenance Items

Fixed in 1.11

- Previous versions of the firmware could drop MIDI output data in some rare situations. This has been corrected.

Fixed in 1.02

- Corrected a problem that sometimes resulted in the computer not recognizing the US-122L or US-144 at boot-up.
- Improved analog output muting during computer boot-up and driver initialization.
- Previously, the US-144's digital output would power up disabled, regardless of the setting in the control panel. Changing any setting on the control panel would enable it. This has been corrected.