

■ Corrections to the Owner's Manual

"6 ESP/MP3 (remote control only) key" on page 10

Correct: During playback of a MP3 disc, use this key to search track name. During playback of CD, use this key to

switch the ESP function on or off. The default setting is on.

Incorrect: During playback of a MP3 disc, use this key to search track name. During playback of CD, use this key to

switch the ESP function on or off. The default setting is off.

The ESP (Electronic Shock Protection) function in "Listening through headphone" on page 16

Correct: Pressing the ESP/MP3 key turns the ESP function on or off. When the ESP is set to on, "10 SEC"

briefly appears and the "ESP" indicator lights up on the display. While the unit is buffering audio data, the "ESP" indicator blinks.

NOTE:

The default setting is on.

Incorrect: During playback of a CD, press the ESP key to turn the ESP on or off. When you turn the ESP on, 40

SEC (40 seconds) briefly appears, and the ESP indicator lights on the display.

■取扱説明書の訂正

16EPS/MP3キー 7ページ

正: 音飛び防止機能(EPS)がオン/オフします。

誤: CD再生中に押すと音飛び防止機能(EPS)がオンになります。

EPS (音飛び防止機能) 11ページ

正: EPS/MP3ボタンを押すと、EPS機能をオン/オフできます。

EPS機能をオンにすると、ディスプレイに" 10 SEC "が短く表示され、"EPS"インジケータが点灯します。

バッファーメモリーに音楽データを読み込んでいる間は"EPS"インジケータが点滅します。

●初期設定は" **ON** "です。

誤: CDの再生中にEPSボタンを押すと、ディスプレイに" 40 SEC "(40秒)の表示が短くでたあとEPSイ

ンジケータが点灯します。

●初期設定は" **OFF** "です。

D00983700A Printed in China