


New function in Firmware V1.10

ANALOG Ref LVL ADJUST page

An ANALOG Ref LVL ADJUST page has been added to the SYSTEM SETUP Screen. On this page, you can make fine adjustments to the reference levels for the analog inputs and outputs of each channel independently.

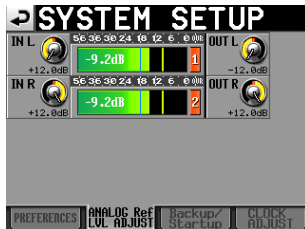


Make fine adjustments to the analog input levels with the IN \times knobs and make fine adjustments to the analog output levels with the OUT \times knobs (“ \times ” is L or R).

Touch a knob to select (highlight) it, and turn the **DATA** dial to adjust its level.

Turn the **DATA** dial to change the value in 0.1dB intervals. Press and turn the **DATA** dial to change the value in 1dB intervals. The current values are shown beneath their knobs.

Setting range: -6dB to +6dB (default: 0dB)

If the INPUT SOURCE on the INPUT tab of the AUDIO I/O screen is set to Digital instead of Analog, the knob will not appear and Analog IN not selected will appear in the meter area.

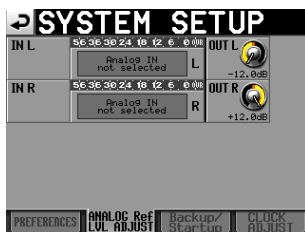

Analog inputs not selected